


Fitting Instructions

01157 365 100

1. Check Contents

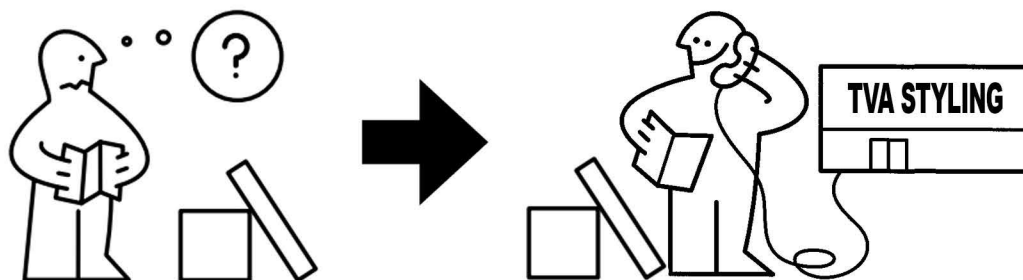


Fitting Kit x 1




Front Bumper Spoiler x 1




Side Skirts x 2

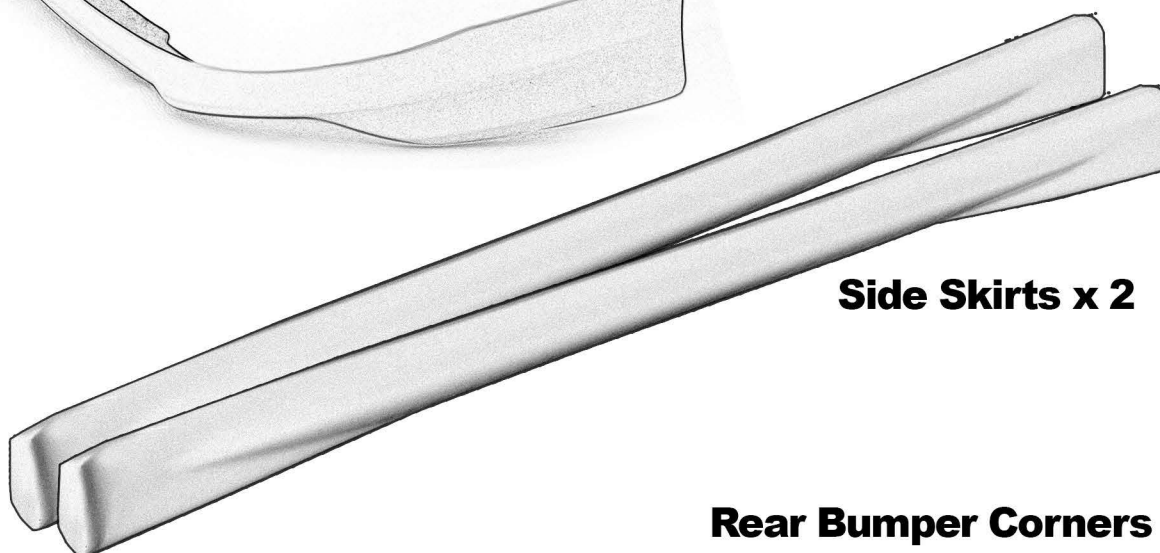


Rear Bumper Corners x 2

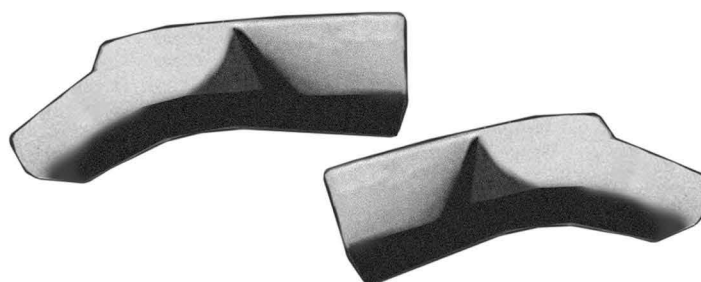

2. Seek Professional Help

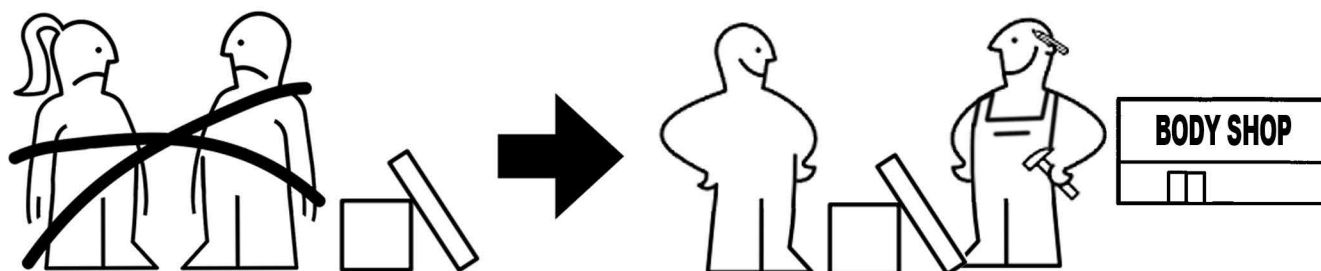


This kit is designed to be fitted by a professional body fitter.

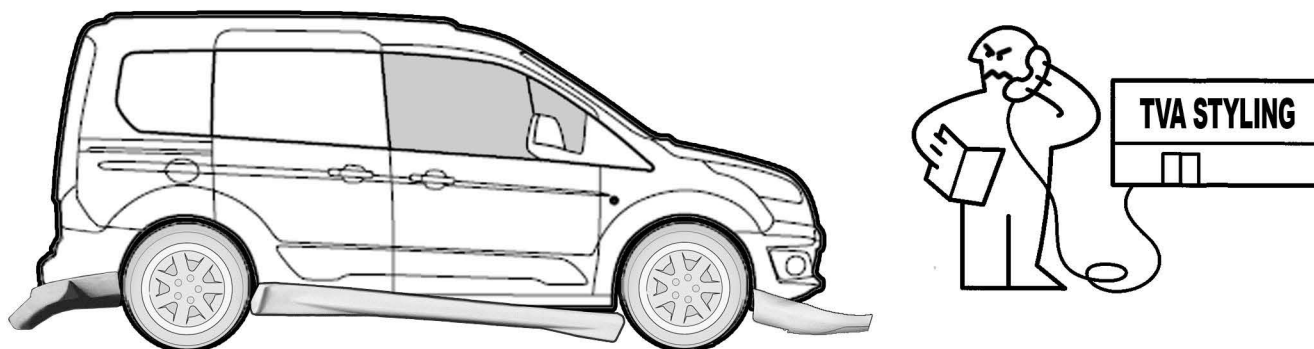

We are not responsible for a bad fitting job.


3. Thoroughly clean

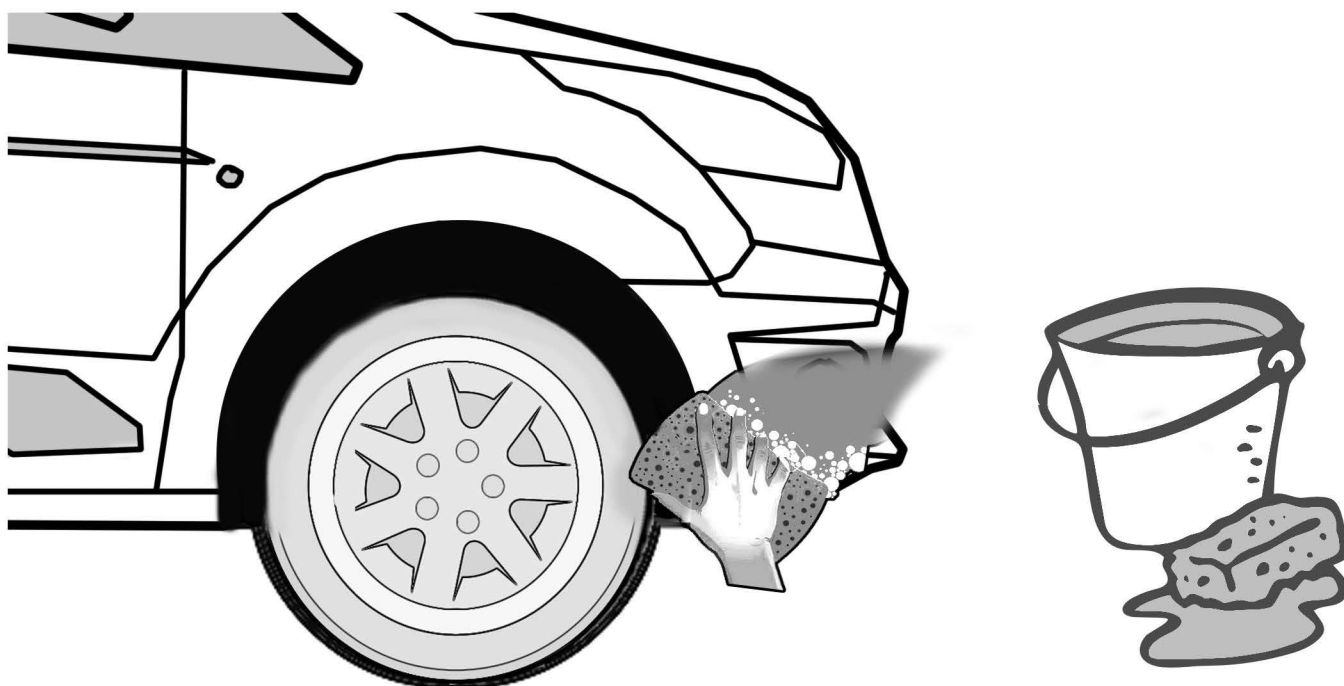

Use a mild detergent and thoroughly clean all areas where adhesive will contact. Then dry using a cloth.

4. Before glueing, offer up

Do not place any glue or tape on the part until you have offered it up...

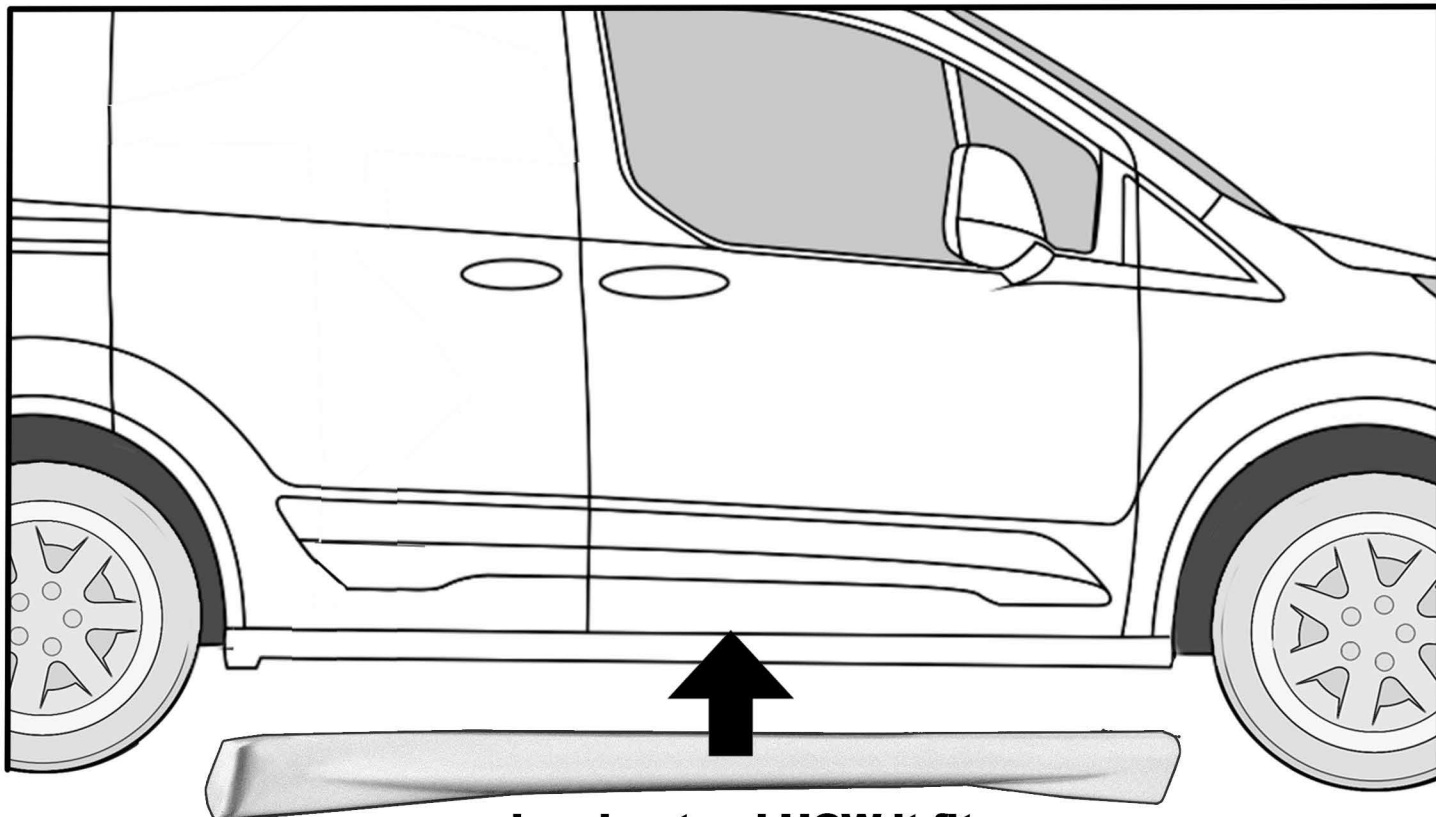


...and understand HOW it fits.

5. Add Glue and Tape

Add the contact adhesive and the contact tape as required.


The contact adhesive works best at about 18-22°C

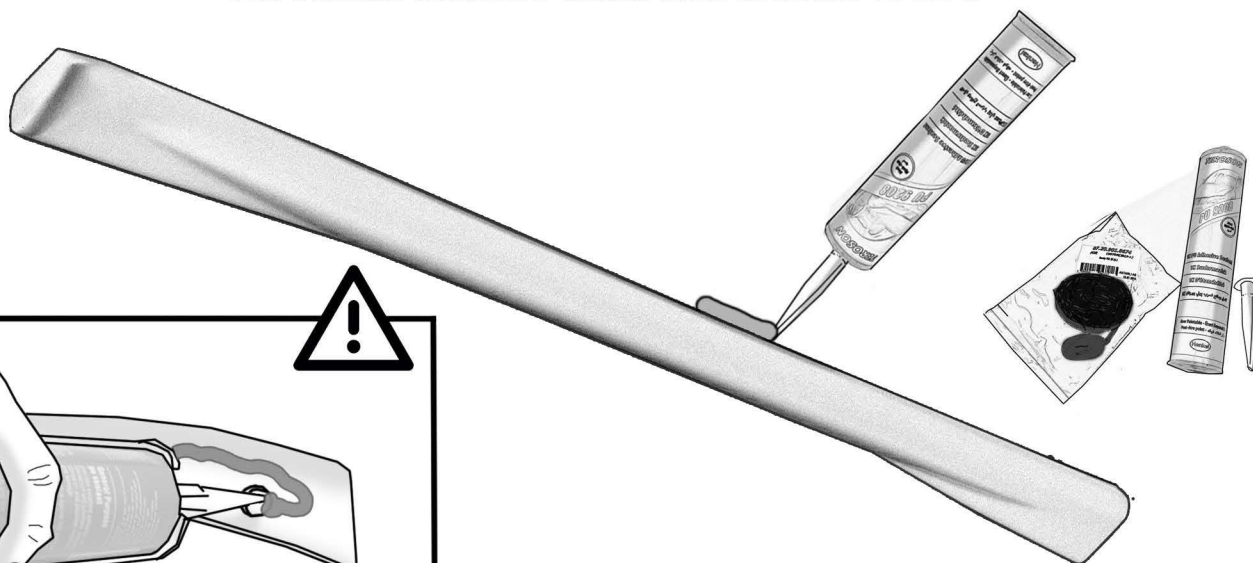

Be sure to fill any jig holes with adhesive to prevent water ingress

6. Stick in place


Push the part firmly into place. The contact adhesive will grip quickly...

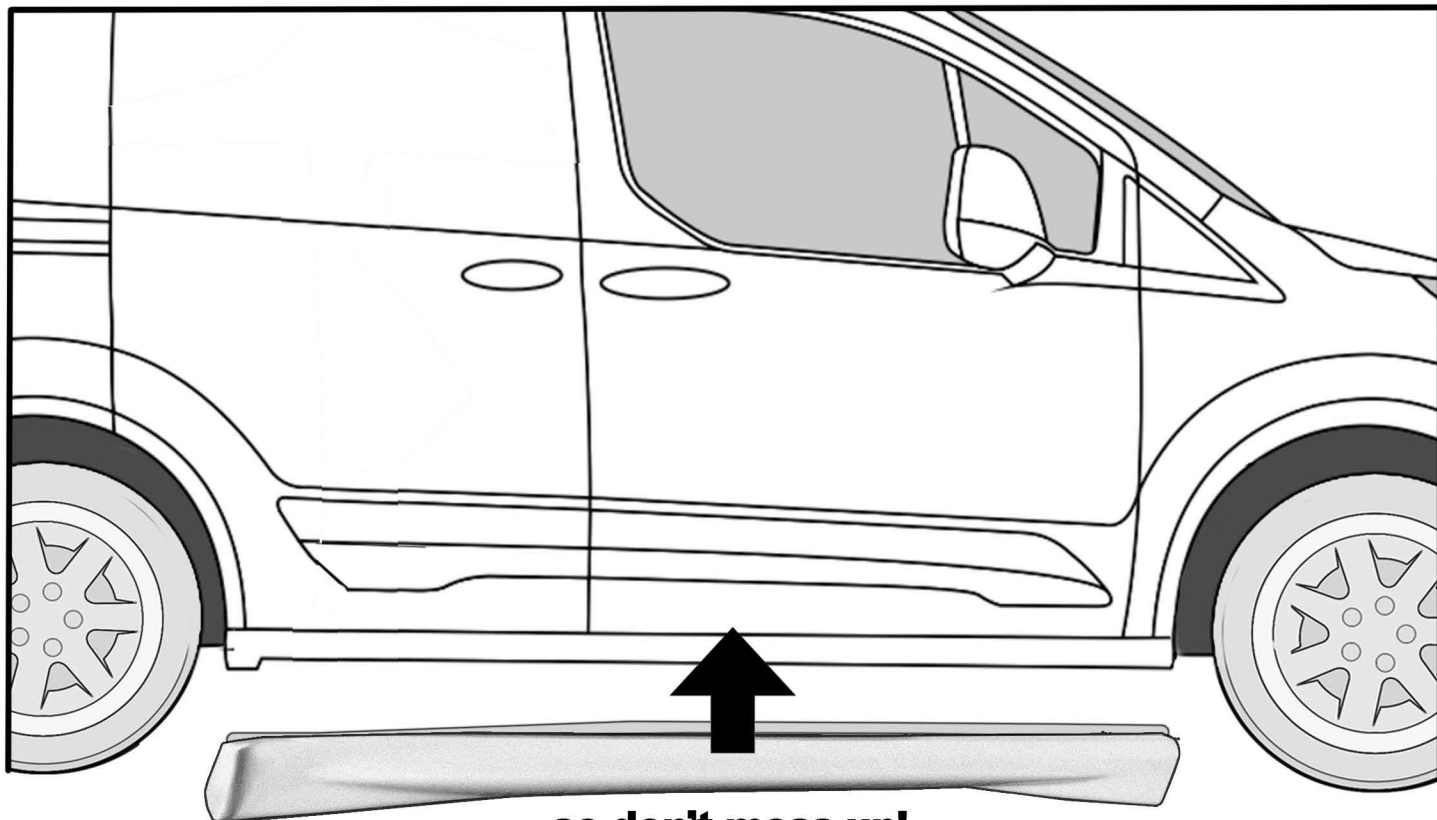

...so don't mess up!


7. Clean off any overspill

Quickly wipe away any overspill from the body work with a damp cloth.

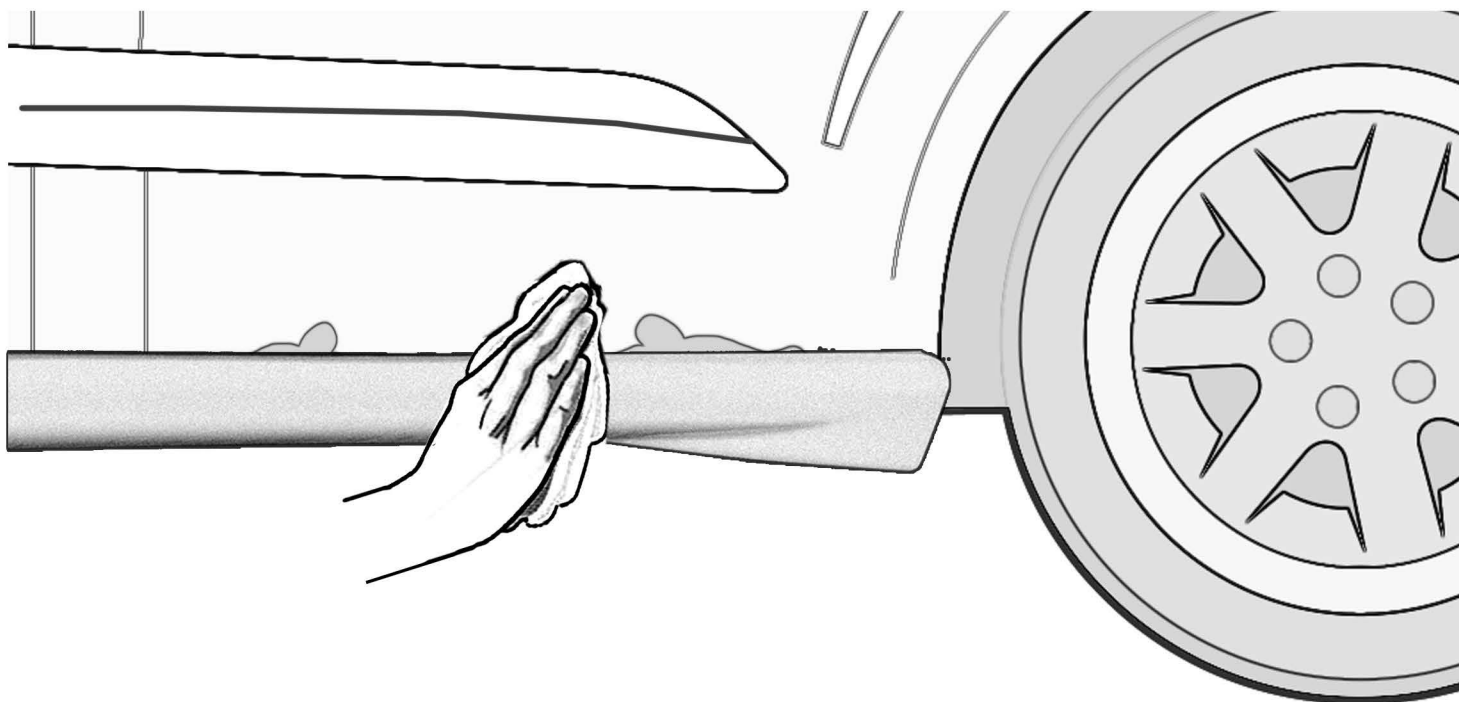


8. Repeat with other parts

Fit the other parts

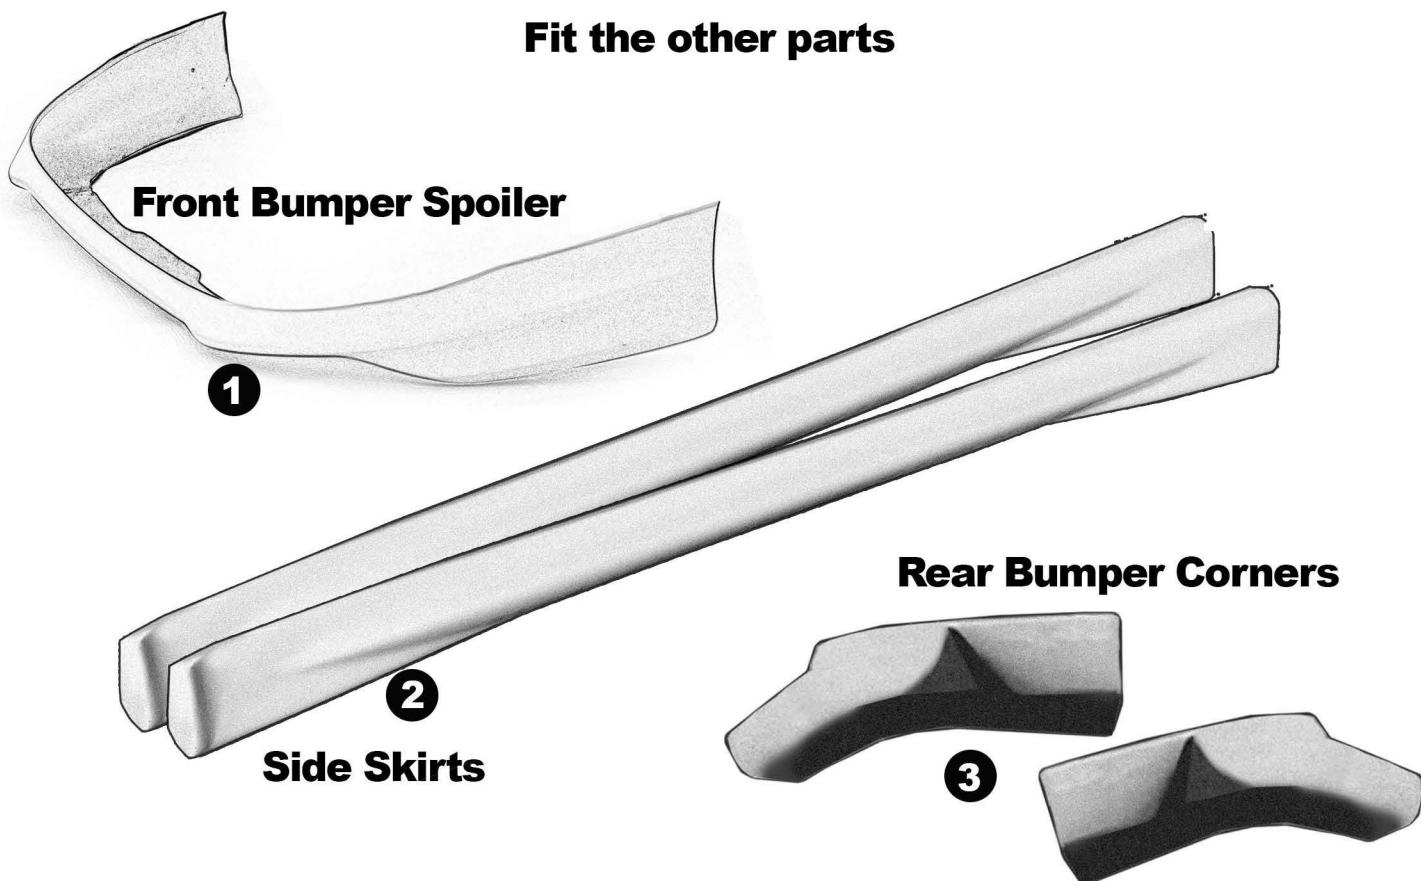


9. When fitting the side skirts

On some models the front mud-flap will prevent the side skirt from fitting correctly. Either remove the mud-flap or cut a small section from the end of the side skirt to fit.

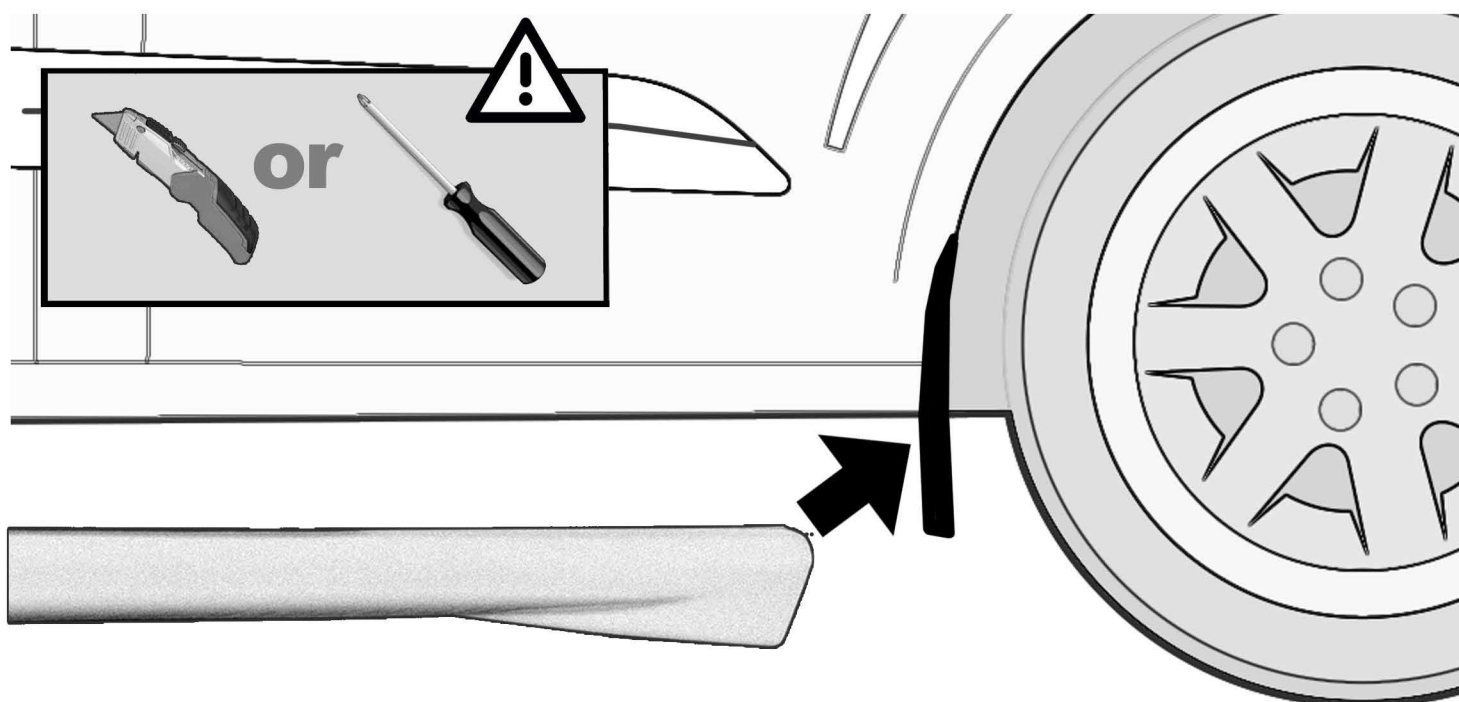

10. Wait for 12 hours

Before driving in wet conditions, allow 12 hours for the adhesive to cure.

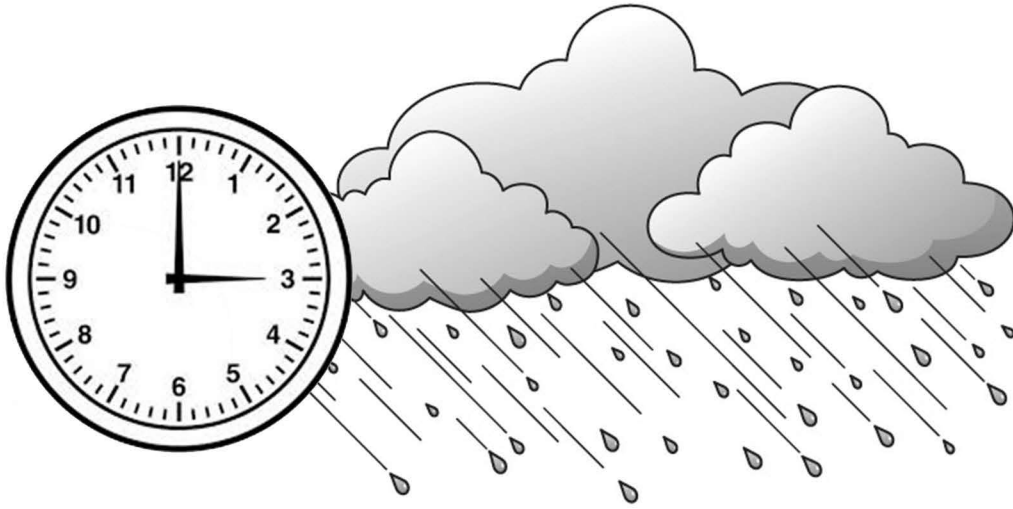

11. Look Cool!

