



Fitting Instructions

01157 365 100


1. Check Contents

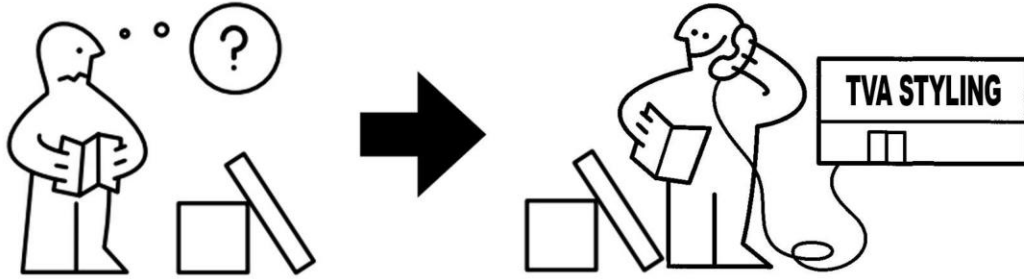

2. Seek Professional Help

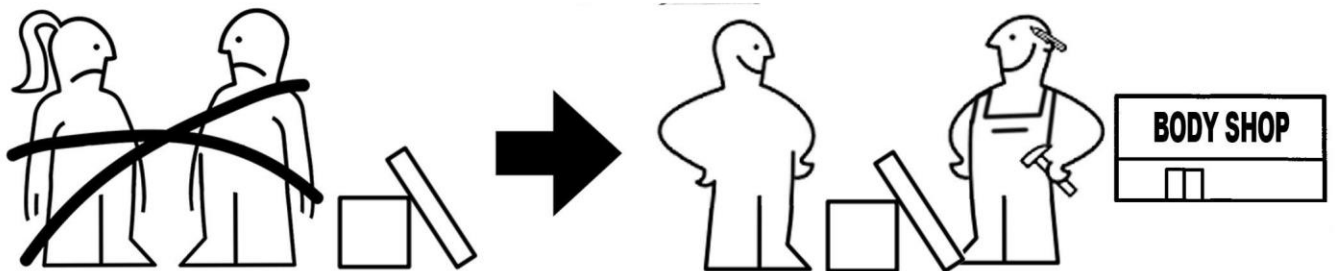

This kit is designed to be fitted by a professional body fitter.

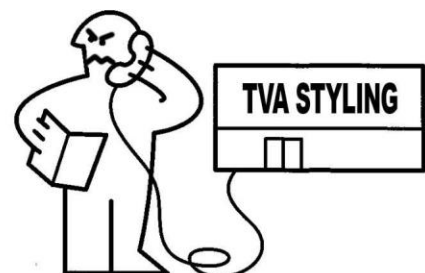

We are not responsible for a bad fitting job.


3. Thoroughly clean



Use a mild detergent and thoroughly clean all areas where adhesive will contact. Then dry using a cloth.

4. Before glueing, offer up

Do not place any glue or tape on the part until you have offered it up...

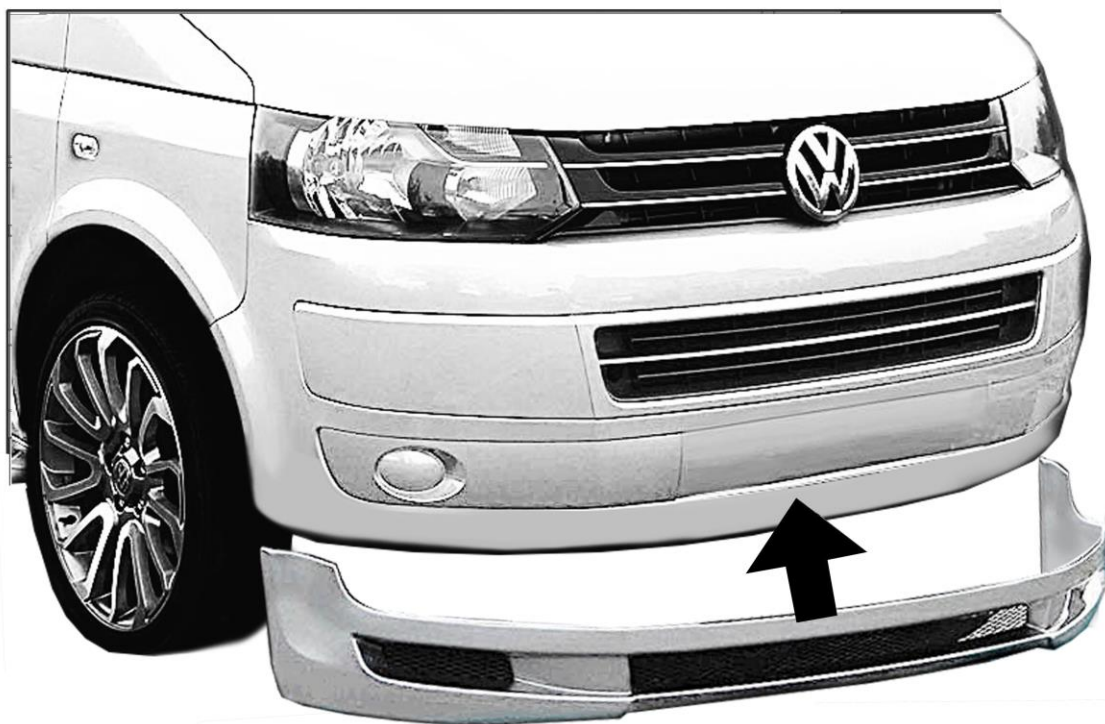

...and understand HOW it fits.


5. Add Glue and Tape

Add the contact adhesive and the contact tape as required.



6. Stick in place Tape

Push the part firmly into place. The contact adhesive will grip quickly...

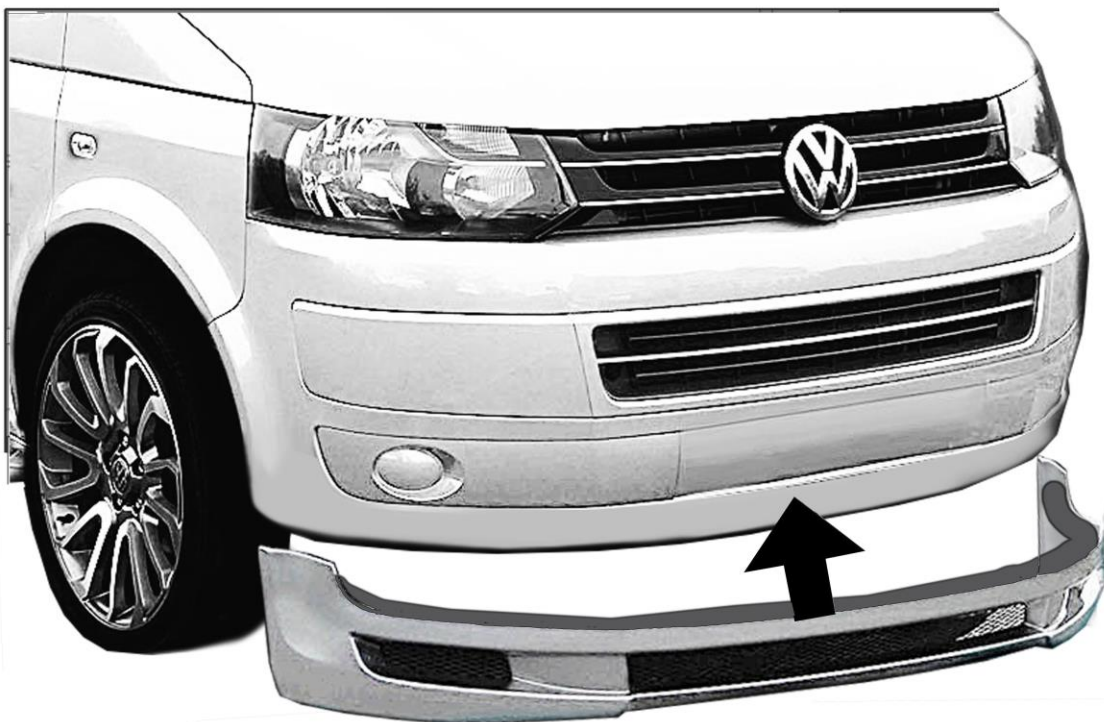

...so don't mess up!


7. Clean off any overspill

Quickly wipe away any overspill from the body work with a damp cloth.



8. Wait for 12 hours

Before driving in wet conditions, allow 12 hours for the adhesive to cure.

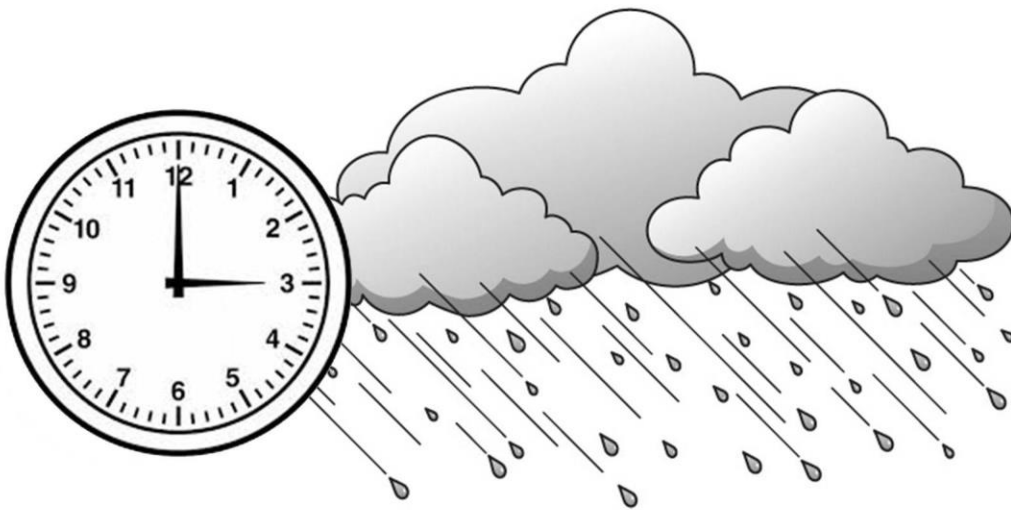

9. Look Cool!

