


TVA SPORTS BODY KIT FORD TRANSIT CUSTOM

Fitting Instructions

01157 365 100

Fitting Kit x 1



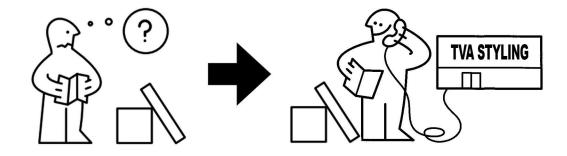

Front Bumper Spoiler x 1


Side Skirts x 2

Rear Bumper Corners x 2


Front Wheel Arches x 4

Rear Wheel Arches x 4

2. Seek Professional Help

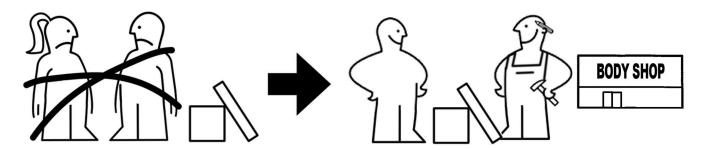


This kit is designed to be fitted by a professional body fitter.

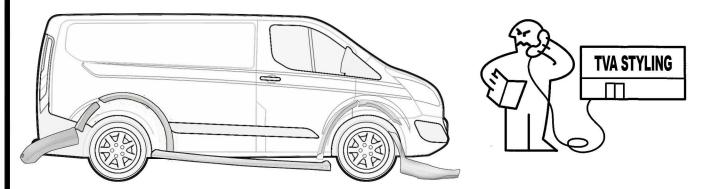

We are not responsible for a bad fitting job.

3. Thoroughly clean

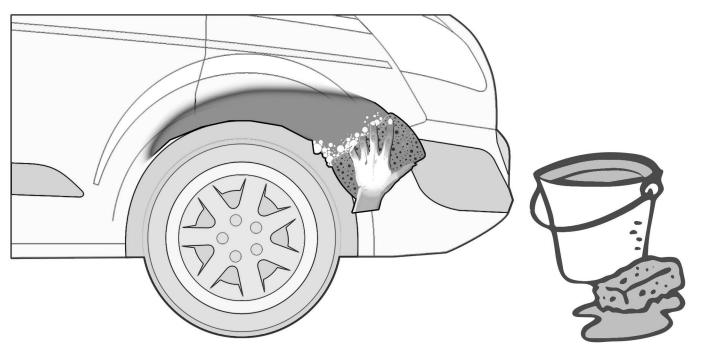

Use a mild detergent and thoroughly clean all areas where adhesive will contact. Then dry using a cloth.

4. Start with the Side Skirts

For Correct fitting the sequence is vital:

Start with the Side Skirts. Then...


The Front Bumper Spoiler.
Then...




The Rear Bumper Corners. Then...



The Rear Wheel Arches. Then...

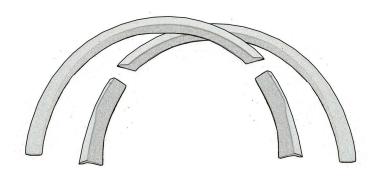


The Front Wheel Arches.

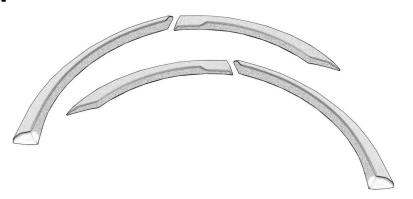

5. Before glueing, offer up

Do not place any glue or tape on the part until you have offered it up...

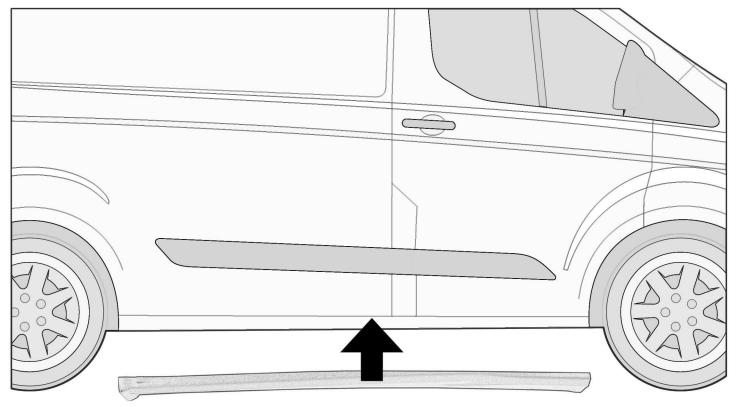


...and understand HOW it fits.

6. Add Glue and Tape


Be sure to fill any jig holes with adhesive to prevent water ingress

Add the contact adhesive and the contact tape as required.

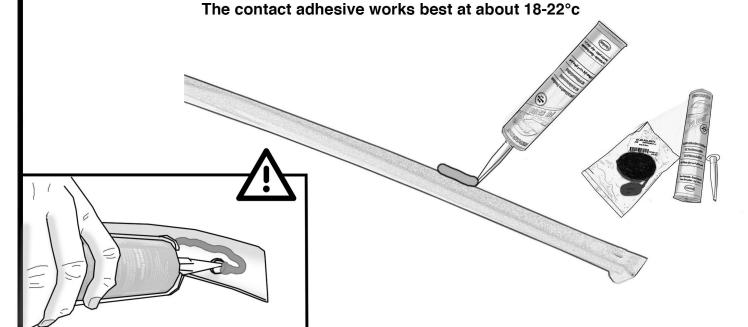

7. Stick in place


Push the part firmly into place. The contact adhesive will grip quickly...

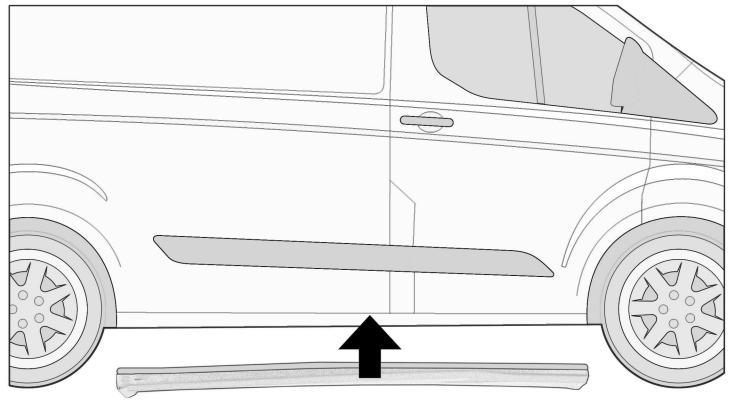

...so don't mess up!


8. Clean off any overspill

Quickly wipe away any overspill from the body work with a damp cloth.

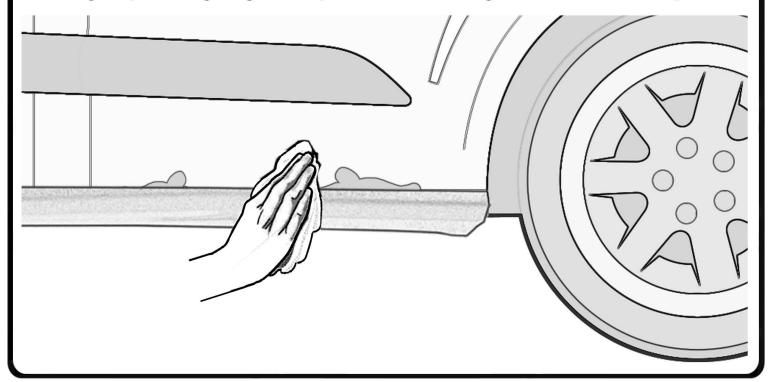


9. Repeat with other parts

Fit the other parts, remembering the correct sequence from step 4.

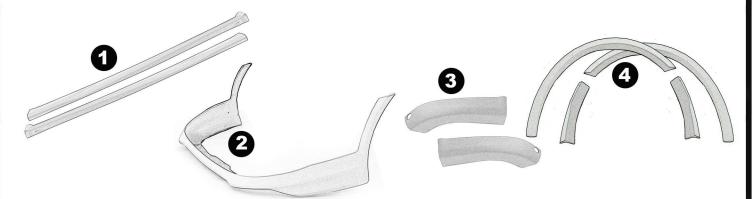


When you get to the Front Wheel Arches STOP!

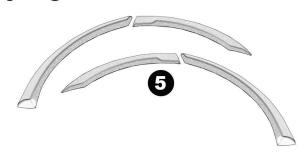


10. Fit Front Wheel Arches

When fitting the Front Wheel Arches, you must leave a 10mm clearance from the door gaps, so the door can open without hindrance.

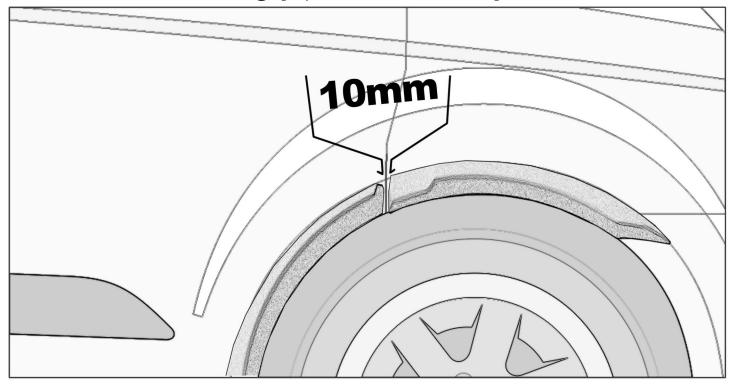

11. Wait for 24 hours

Before driving in wet conditions, allow 24 hours for the adhesive to cure.

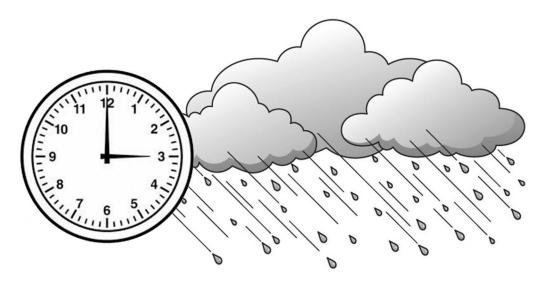

12. Look Cool!

